

IN DASH by PANAVISE®

I-75106-194

Page 1 of 2

MOUNTING LOCATION:

Right side of radio

TOOLS REQUIRED:

3/8" socket (magnetic)
1/4" driver
Hook tool

HARDWARE INCLUDED:

Supplied for use with #701
holder only: (4) Hex head
screws [4H]

INSTALLATION INSTRUCTIONS

PART#: 75106-194
MFG: PLYMOUTH
DODGE / JEEP

MODELS & YEARS:

PLYMOUTH: Neon 94-99
DODGE: Neon 94-99
Ram P/U (All) 98-2001
Ram HD P/U 2500 and 3500 2002
JEEP Cherokee
Cherokee Sport 97-2001
Cherokee Classic & Ltd. 2001
Cherokee Country 97-2000

** ADVISEMENT **

Read instructions completely prior to starting installation. All InDash Mounts are designed so that after installation, phone is facing normal driver position for left-hand drive vehicles. This mount is not designed to be used in foreign countries with right-hand drive vehicles. Use extreme care when working around the plastic components on the dash. Excess force, can cause breakage of the plastic components.

STEP #1 (FOR PLYMOUTH/DODGE NEON ONLY)

Remove ashtray and lighter and set aside. Starting from lower edge of bezel pull out to unsnap clips, set bezel aside.

STEP #1 (FOR DODGE RAM P/U & CLUB CAB)

Apply emergency brake, turn ignition on but DO NOT START VEHICLE; shift down to last gear and tilt the steering wheel all the way down. (FOR 1998 ONLY: Locate the power outlet on the right side of the climate control, open it and remove the screw located inside). Starting from the right side remove the molding that surrounds the radio, climate control and the instrument cluster. This molding is held in place by spring clips all the way around the molding and might be tight. Once the molding is released, if applicable, disconnect the power outlet and set the molding aside.


STEP #1 (FOR JEEP CHEROKEE (Sport/Classic/Country) ONLY)

Apply emergency brake, turn ignition on but DO NOT START VEHICLE, and shift to 3rd gear. With both hands on the bottom corners of the bezel of the radio/climate control, pull to release (2) spring clips. Once released from the bottom, pull the bezel from the top and from the sides to release the additional (4) clips, then set bezel aside.

STEP #2 With the 3/8" socket, remove the (2) screws that hold the radio in place. Pull the radio halfway out and locate a guide pin which is under the mounting flange on the right-hand side of the radio. Take the InDash Mount and place the slotted hole of the Mount on the pin then pivot it over the radio's face. A portion of the InDash surface with the 1/2" square hole will rest on the radio's face. Push the radio, along with the InDash Mount, back into place.



View of InDash mounted

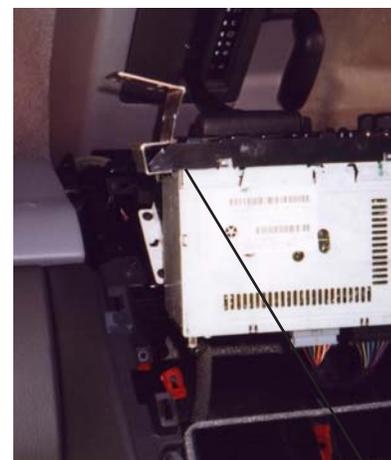

How mount fits on radio

(Continued on pg.2)

- STEP #3** Take one of the screws which holds the radio and place it on the socket, then put the socket and the screw through the squared hole of the InDash Mount to install and tighten. Install the screw on the left side of radio. Place bezel back into place by guiding the InDash through the bezel's radio opening and slide the bezel toward the left to have it fall into place, (FOR THE DODGE RAM ONLY reconnect the power outlet). Push bezel to snap securely back into place. (FOR THE DODGE RAM ONLY reinstall the screw at power outlet.)
- STEP #4** Attach phone holder to InDash Mount. If using a PortaGrip #701 holder adjust to the size of the phone prior to mounting and then mount with the supplied (4) 8-32 x 1/2" Hex head screws.

INSTALLATION IS NOW COMPLETE. ENJOY YOUR NEW INDASH by PANAVISE MOUNT.



Dodge Ram P/U



Jeep Cherokee Sport, Classic, & Country



Plymouth Neon / Dodge Neon



10-10-01