

INDASH by PANAVISE®

I-75127-616

Page 1 of 2

MOUNTING LOCATION:

Right side of Air Vent V R

CELL PHONE & MEDIA MOUNT INSTALLATION INSTRUCTIONS

TOOLS REQUIRED:

- Phillips screwdriver
- Hook tool, Flat Dash Tool
- Marking pen, 10mm socket

PART# 75127-616

MFG: MAZDA

MODELS & YEARS:

MIATA MX-5 2016-2020

HARDWARE INCLUDED:

- (3) #8x9/16" NeedlePoint Screws
- (1) S75127-616 Mount, (1) 75002 Top
- (1) 8-32x1/2 Machine Screw & Nut
- (2) 8-32 Accorn nuts

** ADVISEMENT **

Read instructions completely prior to starting installation. All InDash Mounts are designed so that after installation, phone is facing normal driver position for left-hand drive vehicles. This mount is not designed to be used in foreign countries with right-hand drive vehicles. Use extreme care when working around the plastic components on the dash. Excess force, can cause breakage of the plastic components.

- STEP #1** Open passenger side door. Remove the A-Pillar bezel, pull from the side of the bezel to release the upper and middle clips, tilt it out and pull towards you to release the bottom guide clip. Set bezel on dash.
- STEP #2** Pull off the rubber molding strip on the inside of the door. Set aside. **Locate the pin plug down by the passengers right side kick panel cover.** Pull plug center pin out a little, and remove plug, set aside. Pullout bezel from the back and lift it out towards you. Set bezel aside.
- STEP #3** With your hands pull up on the passenger side bottom door jam bezel, starting at the back of the bezel, releasing (4) clips. Set Bezel aside.
- STEP #4** With 10mm socket driver, remove the bolt below right of the passenger air vent. With your hands pull out the covered bezel that goes from the passengers door to above the climate control releasing 12 clips.



A-Pillar bezel removal



Rubber Molding to Remove



Center Plug to Remove



10mm bolt and bezel



Bottom Door Jam bezel Removal



09-23-16

INDASH by PANAVISE®

I-75127-616

Page 2 of 2

**** ADVISEMENT ****

Read instructions completely prior to starting installation. All InDash Mounts are designed so that after installation, phone is facing normal driver position for left-hand drive vehicles. This mount is not designed to be used in foreign countries with right-hand drive vehicles. Use extreme care when working around the plastic components on the dash. Excess force, can cause breakage of the plastic components.

MOUNTING LOCATION:

Right side of Air Vent V R

CELL PHONE & MEDIA MOUNT

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED:

- Phillips screwdriver
- Hook tool, Flat Dash Tool
- Marking pen, 10mm socket

PART# 75127-616

MFG: MAZDA

MODELS & YEARS:

MIATA MX-5 2016-2020

HARDWARE INCLUDED:

- (3) #8x9/16" NeedlePoint Screws
- (1) S75127-616 Mount, (1) 75002 Top
- (1) 8-32x1/2 Machine Screw & Nut
- (2) 8-32 accorn nuts

STEP #5 Locate the flat area below the right side of the middle air vent bezel. The mount will fit here, attached by (3) supplied needle point screws. Optional (1) Machine screw and nut for top center screw (a), protective tape to InDash Mount to protect dash material. (b)

STEP #6 Replace large dash bezel by starting at the passenger door working your way to above the climate control. Replace all other bezels, bolt, and pin in reverse order

STEP #7 Install mount Top 75002 onto InDash bottom piece with 2 8-32 accorn nuts.



Mounting location for InDash


INSTALLATION IS NOW COMPLETE. ENJOY YOUR NEW PANAVISE INDASH MOUNT.



Large Dash Bezel



Large Dash Bezel

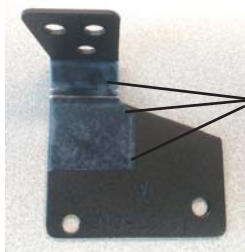

(a) Optional Tape Install



Screw Nut Install Location

