

# INDASH by PANAVISE®

751371314

Page 1 of 1

## MOUNTING LOCATION:

Right side of radio JR

## TOOLS REQUIRED:

Dash Tool, Hook Tool

Phillips Screwdriver

## PARTS INCLUDED:

(1)S7-2067,(2)A-#8x9/16 Needle Pt.Screw

(1)Protective Tape Piece

## MOBILE DEVICE & MEDIA MOUNT

### INSTALLATION INSTRUCTIONS

PART#: 751371314

MFG: TOYOTA

MODELS & YEARS:

**Tundra 2014 -2018**

## \*\* ADVISEMENT \*\*

Read instructions completely prior to starting installation. All InDash Mounts are designed so that after installation, phone is facing normal driver position for left-hand drive vehicles. This mount is not designed to be used in foreign countries with right-hand drive vehicles. Use extreme care when working around the plastic components on the dash. Excess force, can cause breakage of the plastic components.

**STEP #1:** With Dash tool remove the bezel below the climate control by inserting flat dash tool in between the lower bezel and the climate control bezel. Pry straight out to release the top (5) clips. Pry or Pull to release the bezel all the way. There are (10) total clips that hold it in place.

**STEP #2:** Put the InDash in place to locate where the indash contacts the angle of the dash cavity. Install the supplied protective tape and trim as shown to protect the dash. See the pictures to right.

**STEP #3:** Re-Place the InDash mount on the right side of climate control cavity flat area so screw tab lines up with back corner. Install one of the supplied screws.

**STEP #3:** Install the other supplied screw in the hole on the side.

**STEP #4:** Replace the bezels.


INSTALLATION IS NOW COMPLETE. ENJOY YOUR NEW INDASH by PANAVISE MOUNT.



Bezel below CC removal



Climate Control removal

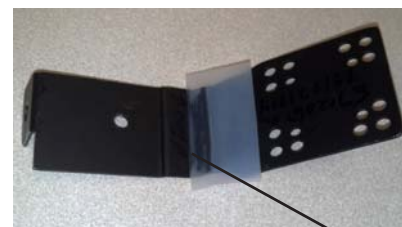

Tape Location to edge



Trimmed Tape



Final InDash install picture



InDash installed showing location



03-09-18